


SHRUB PLANTING

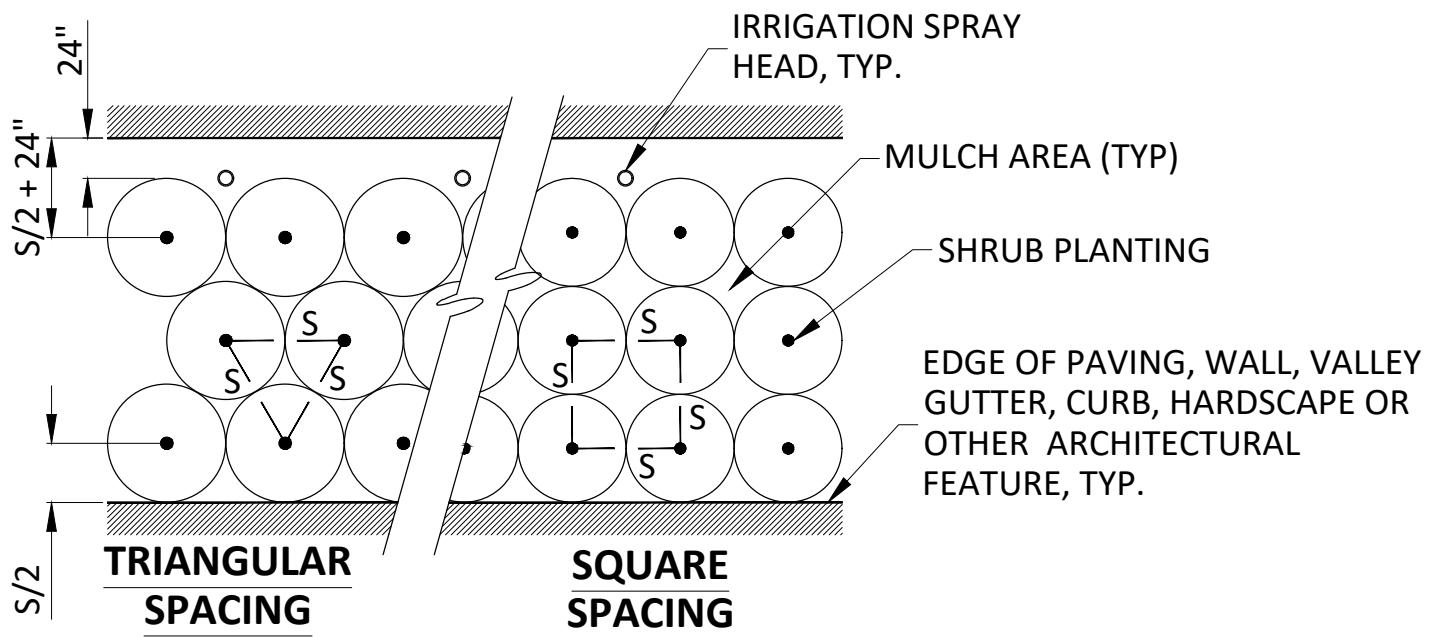

NOTES:

1. S = PLANT SPACING DISTANCE ON CENTER. SEE PLANT QUANTITY CHART FOR USE AS A GUIDE FOR SHRUBS AND GROUNDCOVERS WHEN PLANTS ARE SPACED EQUIDISTANT FROM EACH OTHER.
2. AT ALL SHRUB AND GROUNDCOVER LOCATIONS WHERE SPRAY IRRIGATION IS USED, HOLD PLANTING 24" CLEAR OF CURB LINE IN CONJUNCTION WITH IRRIGATION PER AB 1881.

PLANT QUANTITY CHART	
SPACING	# OF PLANTS/S.F.
12" O.C.	1.150
18" O.C.	0.512
24" O.C.	0.290
30" O.C.	0.185
36" O.C.	0.128
42" O.C.	0.087
48" O.C.	0.063

PLANT SPACING

CITY OF MILLBRAE * STANDARD PLANS

NO.	REVISIONS		DATE	PLANTING STANDARD				APPROVED	
DRAWN	CK	CHECKED	NT	DATE	03/2024	SCALE	NTS	SHEET	1 OF 1
								DWG. NO.	L-15

City Engineer